




Decontamination Foot Floor Mats



INSTRUCTIONS FOR USE

US

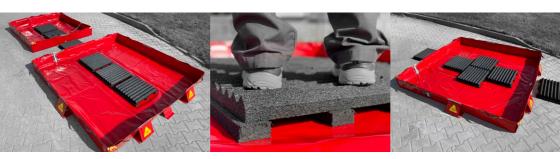

This document describes the operation and characteristics of the Decontamination Foot Floor Mats (hereinafter "mat" or "mats"). It contains important information about how to use the mats properly and how to increase their reliability and life. This document must always be available in the place where the mat is used. Keep it together with the mats at all times. The operator is responsible for using the mats safely and in compliance with the instructions in this manual, which applies to any third persons as well. If you have any doubts about the correct use of the mats, please contact the manufacturer or an authorized dealer.

Decontamination Foot Floor Mats guarantee the effective removal of dangerous substances during the decontamination of people. They are made of durable rubber composite based on recycled raw materials. Mats with a special chemically resistant surface treatment against absorption are primarily intended for placement in Collapsible Spill Berms DECON from Eccotarp, but they can also be used as cleaning mats for entering the decontamination area.

Decontamination Foot Floor Mats



The delivery includes:

- → Decontamination Foot Floor Mats in the appropriate number
- 1× Instructions for use, incl. warranty certificate

Technical details

| Name | Dimensions (in) | Weight (lb) |
|--------------------------------|-----------------|-------------|
| Decontamination Foot Floor Mat | 19×19×3 | 21 |

General information



When using the mats, observe these instructions as well as all the safety notices herein.


- 1. Decontamination Foot Floor Mats serve to ensure the effective removal of hazardous substances during the decontamination of persons.
- 2. The mats are made of recycled material with a special chemically resistant surface treatment against absorbency.
- 3. The mats are resistant to abrasion.

Instructions for use of Decontamination Foot Floor Mats




Place the Decontamination foot floor mats directly in the berm, or in front of/behind the berm. Effective decontamination can be achieved in a position with outstretched arms.

Collapsible Spill Berm DECON

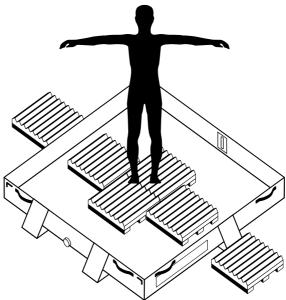

Collapsible Spill Berm DECON

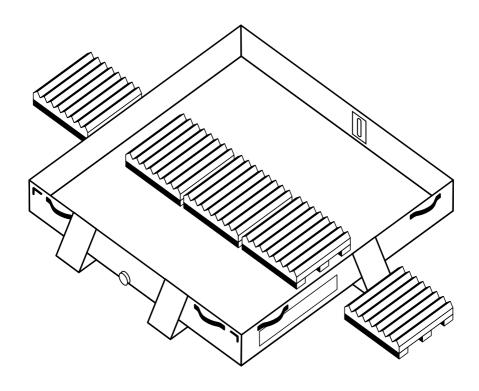

Handling instructions and safety warnings

- 1. Make sure there are no sharp objects under the berm or mats, such as pieces of broken glass, nails, sharp stones, etc., which might mechanically damage the bottom of the berm.
- 2. Do not put the product near fire or any other sources of heat.
- Observe the safety measures for working with hazardous liquids and with substances harmful to the environment.
- 4. Make sure you observe any necessary precautions regarding personal safety, such as the use of protective equipment.

Maintenance and storage

After use, the product must be washed with an appropriate neutralizing agent (for aggressive substances), lukewarm water or another suitable cleaning agent. Dry mats can be stored in stacks on top of each other – one on top of the other – in a dry place away from UV radiation.



Important contact information

Qualified service: ECCOTARP USA, inc. 357 West 36th Street New York, NY 10018 USA

info@eccofighter.com T: 1 212-725-9845

Repair

Any repair work on the mats must always be done by the manufacturer's qualified personnel. In the event of unprofessional repair or design change, the product's proper operation cannot be guaranteed. If you want to request repair, order accessories or lodge a complaint, please, contact your qualified supplier.

Warranty conditions

The warranty period is indicated in the warranty certificate on the last page of these Instructions for use. The warranty period is 24 months and begins on the day indicated in the warranty certificate. The warranty does not apply to the normal wear and tear or to damage caused by improper use or by the instructions in this manual not being observed.

Warning – the warranty does not cover damage from long-term exposure to chemicals. Even a small amount of aggressive chemicals will cause degradation of the material from which it is made during long-term exposure. This can be manifested by microscopic cracks on the surface, or by a change in the properties of the material, which can lead to easy damage and tearing.

Disposal

The product must be disposed of in compliance with applicable legal regulations and with the user's internal directives.

Warranty Certificate

This product is guaranteed for 24 months.



This warranty covers:

for defects caused by a manufacturing defect of the material used and other damage not caused by improper handling by the user or appropriate modification of the product.

This warranty does not cover:

damages caused by improper handling and use of the product and failure to follow the "user manual". For example, punctures or other damage caused by placing the product in an inappropriate area with sharp objects, use or placing the product near open flames, and other inappropriate uses.

Warning – the warranty does not cover damage from long-term exposure to chemicals. Even a small amount of aggressive chemicals will cause degradation of the material from which it is made during long-term exposure. This can be manifested by microscopic cracks on the surface, or by a change in the properties of the material, which can lead to easy damage and tearing.

The manufacturer is not liable for direct or indirect damage caused by other than the recommended use of the product.

Complaints must be applied within 24 months of purchase from your supplier. When applying please provide your complaint with full details – product serial number, proof of purchase, appropriate photographic documentation and a detailed description of the circumstances in which a fault has occurred.

| | | ······································ | | |
|---------------|-------|--|-------------------------|------|
| Product name: | | | | |
| | | | | |
| | | | | |
| | | | | |
| Production | | | Channer and | |
| code: | | | Stamp and signature: | |
| | | | signature. | |
| | | | | |
| | | | | |
| Date of sale: | | | In case of | |
| | | | problems, | |
| | | | please contact: | |
| | | | | |
| | ••••• | | | |
| Failure | | | | |
| description: | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |